

STEP ONE

Use long nose pliers and grip the louvre blade that you want to remove. Take care not to scratch or touch the louvre blades above and below the one you are taking out. If the louvre blade is already snapped then go straight to steps three and four.

STEP TWO

Using the pliers twist the louvre blade until it snaps.







STEPS THREE AND FOUR

The snapped louvre blade should now be in two pieces. As it is not glued into place you will be able to remove the blade from the frame of the door without difficulty. Remove both broken sections of louvre blade.

STEP FIVE

Once the broken blade has been removed offer the replacement blade into the empty slot. Push the blade all the way into the slot.





STEP SIX

As narrower louvre blades do not provide much flexibility you will need to trim/shorten the opposite end of the blade to be able to ease it into position. Do this by using the stile (side rail) as a guide. Make a mark on the louvre blade with a pencil to identify how much you need to trim off the blade.




STEP SEVEN

Using a small saw or a Stanley knife trim the louvre blade down to the correct length.

STEPS EIGHT AND NINE

Once trimmed offer the louvre blade into position on one side and using a small hammer gently tap the louvre blade on the opposite side until it is securely in position. Don't be too rigorous as you can cause damage to the blade.



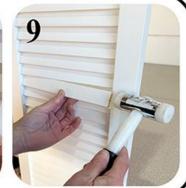



STEP TEN

Using your hands ease the remaining edge into position from the front and back of the door. Should you have difficulty in getting the remaining end into the slot, remove the blade and trim the corners slightly. Then repeat steps eight to ten.

STEP ELEVEN

Check the louvre blade is successfully in place from the front of the door. You have now replaced a louvre blade on a louvre door!



GUIDE 2

For louvre doors with widths: 300mm, 305mm, 350mm, 381mm,400mm and 450mm

